


3.1

| Electrical properties of the sensor | | |
|----------------------------------------|---------------------------------------------------------------------------------------|------------|
| Output function | Normally open (NO) | 1 + |
| Switch output | PNP | |
| Supply voltage | 10 - 30 V DC | |
| Continuous current I _a | ≤ 100 mA | |
| Connection type Plug (S) | 3-pole plug M8x1, freely rotating with knurled screw connection, with PUR cable 0.5 m | (1) (3) |
| Protection class | IP 67 | |
| Switching frequency | 1,000 Hz | |
| Power consumption | ≤ 8 mA | |
| Voltage drop | ≤ 2.5 V | |
| Protection class | | |
| Response sensitivity | 2.8 mT | |
| Temperature range | -13 °F to +167 °F (-25 °C to +75 °C) | |
| Shock and vibration resistance | 30 g, 11 ms / 10 - 55 Hz, 1 mm | |
| EMC | According to EN 60947-5-2 | |
| Reverse polarity protection | Yes | |
| Short-circuit protection | Yes | |
| Activation impulse suppression | Yes | |
| Approvals, conformities CE declaration | | :€ |

Assembly instruction

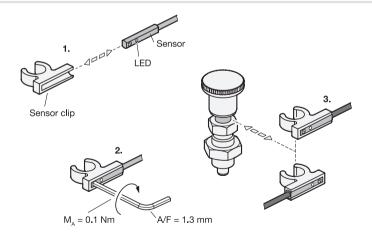

The position of the sensor cable can be freely determined when installing the sensor clip.

Installation steps:

- 1. Insert the sensor into the sensor clip from the side.
- 2. Tighten the hexagon socket screw of the sensor.
- 3. Clip the sensor clip into the ring slot of the indexing plunger in any orientation and then adjust the direction by turning, if necessary.

3.7

က

