

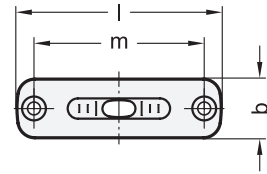
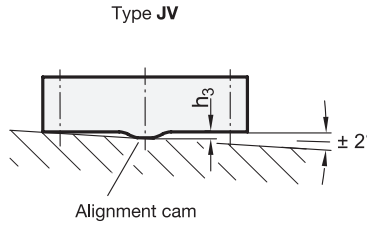


Metric

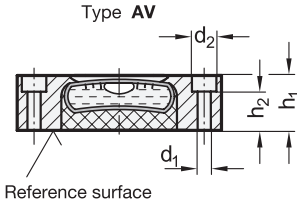

Application example

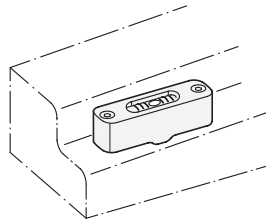

4 Sensitivity

- 6 Angular minutes, bubble moves by 2 mm
- 50 Angular minutes, bubble moves by 2 mm

5 Type

- AV Aligned, mounting from the front
- JV Adjustable, mounting from the front

Metric table

2

Dimensions in: millimeters / inches

Length l	b	d ₁	d ₂	h ₁	h ₂	h ₃	m
54	15.5	3.4	6.3	14.5	11.3	1	45
2.13	0.61	0.13	0.25	0.57	0.44	0.04	1.77

Specification

1 3

Housing

Aluminum

- Anodized finish, natural color
- Anodized finish, black

- ALN
- ALS

Spirit level element

- Glass body
- Filling
- Green transparent

G

Casting compound

Mineral-based

RoHS

On request

- Colorless transparent filling
- Other sensitivities

Screw-on spirit levels GN 2283 are used to check the horizontal position of jigs, machines, devices, appliances and instruments.

The spirit levels of type AV are aligned in relation to the reference surface so that the bubble is centered in the middle of the marking lines once the horizontal position of the contact surface is reached.

The spirit levels of type JV are aligned during installation using the mounting holes. An alignment cam on the bottom serves as a pivot point. With careful tightening, it is possible to achieve an alignment that places the bubble between the middle marking lines.

see also...

Page

GN 2276 Cross Spirit Levels (with Mounting Holes)	QVX
GN 2282 Screw-On Spirit Levels (with Mounting Holes)	QVX
GN 2277 Bull's Eye Spirit Levels (with Mounting Flange)	QVX

Technical Information

General Information on Bull's Eye, Screw-On and Cross Spirit Levels

QVX

How to order

1	Color
2	Length l
3	Filling
4	Sensitivity
5	Type

GN 2283-ALS-54-G-50-AV